


DC MOTOR
5K40.40

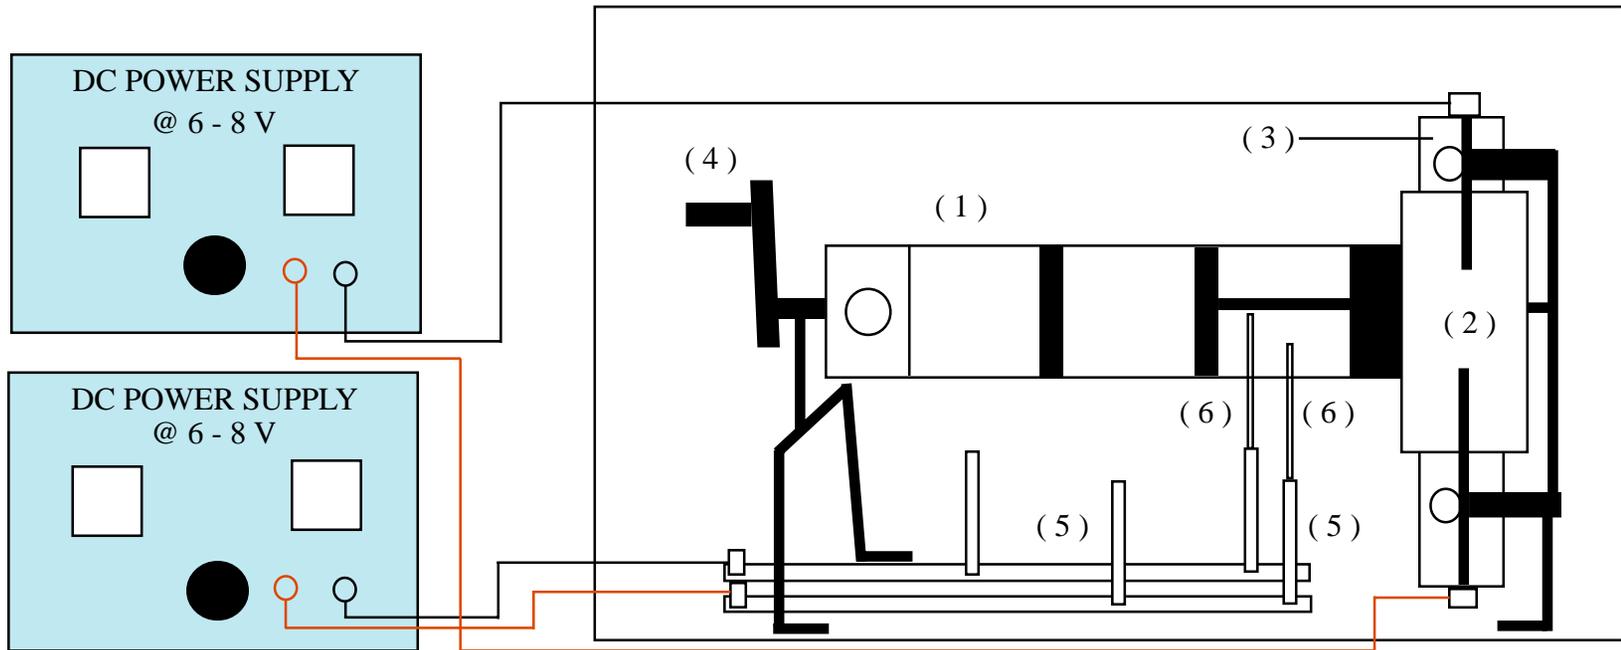

- (1) ROTOR
- (2) COIL
- (3) ELECTRO MAGNET
(COPPER COIL)
- (4) CRANK HANDLE
- (5) BRUSH HOLDERS
- (6) BRUSHES

BRUSHES MUST BE ATTACHED
TO SPLIT PART OF ROTOR.

LEADS FROM BRUSHES ARE
ATTACHED TO SECOND
POWER SUPPLY.

TURN ON BOTH POWER SUPPLIES.

GIVE THE CRANK HANDLE A
“KICK” TO START.

INCREASE VOLTAGE TO ELECTRO
MAGNET TO MAKE ROTOR SPIN FASTER.